



LTL2000S(Q) - Replacement of the Battery

Remove the 10 screws (four on each side plate and six on the front plate).



Remove four screws on each side of the instrument



Remove six screws



We help ideas meet the real world

Pull back the housing to get access to the battery



Remove the bracket by unscrewing the two nuts and washers.



Remove the two connectors on the battery terminals using a flat nosed pliers or similar.



Lift out the battery and replace with new.

Re-assemble in reverse order.

Be careful with the wires or cables when positioning the housing.

After the battery is renewed the instrument must be checked:

- Check all functions (printer, display and keyboard)
- Re-calibrate instrument
- Check calibration constants (from status dump).