


LTL2000S(Q) – Replacement of the Qd Lamp



Remove the SQ lamp cover by removing the four screws from underneath.

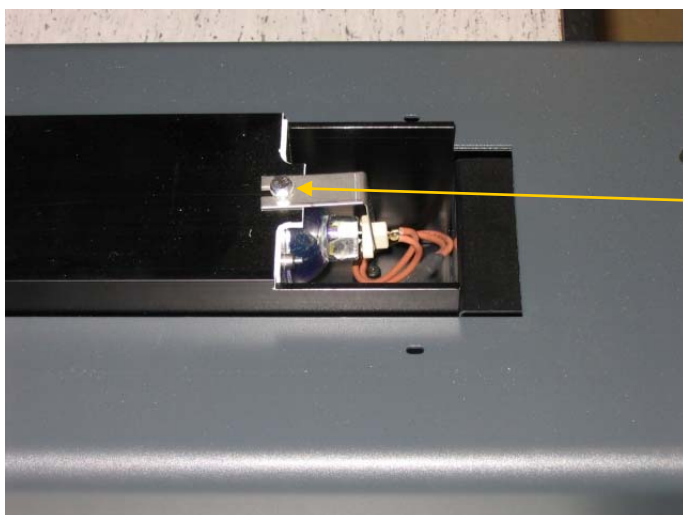

Loosen the set screw and follow the same procedures as when replacing the R1 lamp

After the lamp is renewed the instrument must be checked:

- Re-calibrate instrument
- Check calibration constants (from status dump).